


T5 replace T8--serial connecting instruction:



1: Remove T8 lamp tube



2: Remove T8 lamp lantern

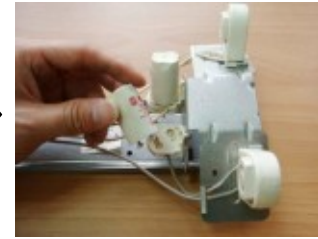

3: Remove starter




4: Remove capacitor



5: Fix the T8 lamp lantern



6: Fix T5 lighting fixture directly on T8 lantern

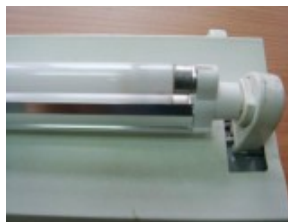

Fixing finished
Energy saved